AFP-3030/NCA-2
## Emergency Operation Sheet

NOTIFIER®
by Honeywell
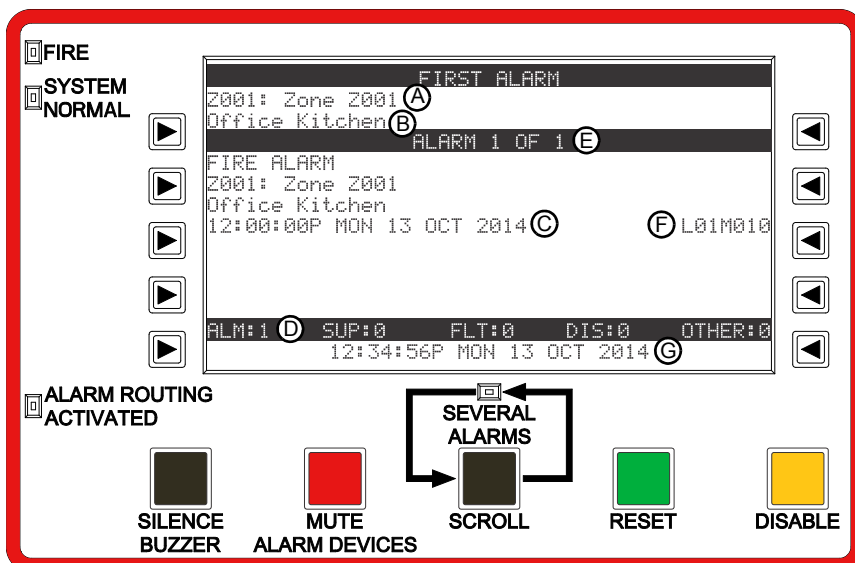
A. Zone Address and Zone Name
B. Point Name
C. Time of Alarm Event
D. Event Counter
E. Alarm Counter
F. Point Address
G. Current Time and Date

FIRE
SYSTEM NORMAL

```
                    FIRST ALARM
Z001: Zone Z001 Ⓐ
Office Kitchen Ⓑ
                   ALARM 1 OF 1 Ⓔ
FIRE ALARM
Z001: Zone Z001
Office Kitchen
12:00:00P MON 13 OCT 2014Ⓒ        ⒻL01M010



ALM:1 Ⓓ  SUP:0     FLT:0    DIS:0    OTHER:0
         12:34:56P MON 13 OCT 2014Ⓖ
```

ALARM ROUTING ACTIVATED

SEVERAL ALARMS

SILENCE BUZZER   MUTE ALARM DEVICES   SCROLL   RESET   DISABLE

SILENCE ALARMS. BRIGADE USE ONLY   EVACUATION

Using the Switch Key, turn the *Silence Alarms* switch ON.

If an evacuation is necessary, turn the *Evacuation* switch ON.
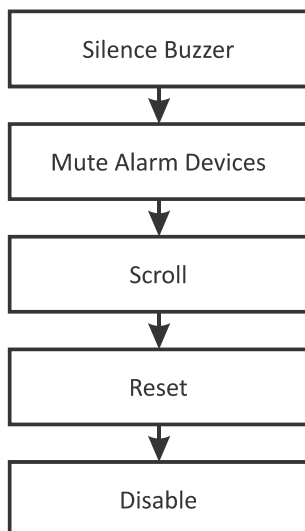
| Silence Buzzer |
Press *Silence Buzzer* to switch off the Panel Buzzer.

| Mute Alarm Devices |
Press *Mute Alarm Devices* to switch off any active Alarm Devices.

| Scroll |
Press *Scroll* to navigate through multiple Alarm Events.

| Reset |
Press *Reset* once the hazards have been controlled.

| Disable |
Press *Disable* to disable all active alarms.

Disable a Zone

1. Enter the Main Menu by pressing the ESC/MENU key, and select ▶DISABLE/ENABLE using the soft key. This will bring up the Point Select Screen.
2. Press ▶POINT SELECT to cycle through the types of points that can be disabled, until "(ZONE)" is shown.
3. Enter the address of the zone to be disabled using the keyboard, or select the zone using the ▶NEXT POINT and ▶PREVIOUS POINT soft keys, then press ▶ACCEPT.
4. Press the ▶DISABLE soft key at the next screen to disable the selected zone.
5. At the confirmation screen, select ▶YES to disable the zone, or ▶NO to return to the previous screen.
6. To re-enable the zone, repeat Steps 1 to 3, and select ▶ENABLE.